




URBANLiving™

1.5 cu. ft. Compact Dryer

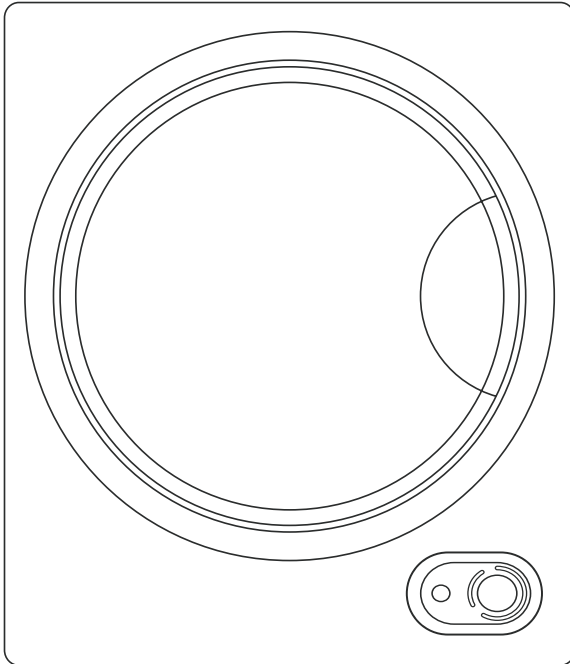

User Guide

Please read this manual carefully before using the dryer and keep it for future reference. urbanlivingappliance.com MODEL # UBLDRY15W

URBANLiving™

PRODUCT REGISTRATION

Thank you for purchasing this Urban Living product. The first step to protect your new product is to complete the product registration on our website at urbanlivingappliance.com/register. The benefits of registering your product include the following:

1. Registering your product will allow us to contact you regarding a safety notification or product update.
2. Registering your product will allow for more efficient warranty service processing when warranty service is required.
3. Registering your product could act as your proof of purchase in the event of insurance loss.

Once again, thank you for purchasing this Urban Living™ product.

CONTENTS

PRODUCT REGISTRATION	2
PRECAUTIONS	4
IMPORTANT SAFETY INSTRUCTIONS	5
SPECIFICATIONS.....	7
PARTS AND FEATURES	8
INSTALLATION INSTRUCTIONS	9
OPERATION INSTRUCTIONS.....	12
CARE AND MAINTENANCE	15
TROUBLESHOOTING.....	17
LIMITED WARRANTY	18

PRECAUTIONS

EXPLANATION OF SYMBOLS

▲ WARNING

Hazards or unsafe practices which COULD result in severe personal injury or death.

▲ CAUTION

Hazards or unsafe practices which COULD result in minor personal injury.

▲ WARNING: Read and understand all safety precautions. Failure to follow all instructions described in this user manual may result in electric shock, fire and/or serious personal injury. The warnings, cautions and instructions discussed in this user manual cannot cover all possible conditions and situations that may occur.


READ THIS GUIDE CAREFULLY

The user guide is intended to help you operate and maintain your new appliance properly. Keep it handy to answer your questions. If you do not understand certain aspects or you need additional help, call Magic Chef® Customer Service: (877) 856-0202. Keep proof of the original purchase date (i.e. sales receipt) with this guide to establish the warranty period.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, the grounding plug reduces the risk of electric shock by providing an escape wire for electric current. This appliance is equipped with a power cord that has a grounding wire with a grounding plug. The plug must be plugged into an electrical outlet that is properly installed and grounded.

This appliance requires a standard 120 Volt, 60 Hz electrical outlet with a 3-prong ground receptacle. To prevent accidental injury, the cord should be secured behind the appliance and not left exposed or dangling.

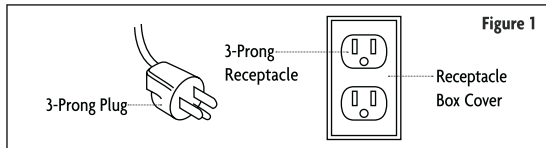

▲ WARNING: Improper use of the grounding plug and/or outlet can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, if doubt exists as to whether the appliance is properly grounded, or either:

- If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.
- If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

▲ WARNING: DO NOT cut or remove the third (ground) prong from the power cord under any circumstances.

IMPORTANT SAFETY INSTRUCTIONS

▲ WARNING: To reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should ALWAYS be followed when using electrical appliances.

When using electrical appliances, basic safety precautions should be followed, including the following:


1. Read all instructions before using the appliance.
2. Risk of child entrapment and suffocation; NEVER allow children to operate, play with, or crawl inside the appliance.
3. This appliance must be grounded. Connect only to a properly grounded outlet. See the "GROUNDING INSTRUCTIONS" section found on page 4.
4. Install or locate the appliance only in accordance with the provided installation instructions.
5. DO NOT place the dryer in steamy rooms or where the dryer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
6. Use the dryer only for its intended use as described in the user guide. This type of dryer is specifically designed to dry clothes. It is not designed for industrial or laboratory use.
7. As with any appliance, close supervision is necessary when used around children or incapacitated persons.
8. DO NOT operate the dryer if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped in any manner.
9. The dryer should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
10. DO NOT cover or block any openings on the appliance.
11. DO NOT put your hand in the spin basket during operation. The spin basket is rotating at a high speed and the rotating parts may cause injury to your hand.
12. DO NOT immerse the power cord or plug in water.
13. Keep the cord away from all heated surfaces.
14. DO NOT store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
15. When cleaning the surfaces of the door and the frame, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth. NEVER clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
16. This dryer is for indoor use only. DO NOT use outdoors.
17. DO NOT place the appliance or cord near heat sources such as radiators, heaters, air ducts, or direct sunlight.
18. DO NOT run the cord under floor coverings. Arrange the cord away from high traffic areas so it will not be a trip hazard.
19. To disconnect the appliance, turn the appliance off, switch off the power outlet and remove the plug from the power outlet.
20. After turning off the power supply to the dryer, wait at least 2 minutes before turning it on again.
21. DO NOT carry the appliance by the cord or pull to disconnect it from the outlet. To disconnect, grasp the plug and pull.

22. DO NOT excessively bend, stretch, twist, or bind the power cord or place heavy objects on it.
23. It is not recommended to use an extension cord with this product.
24. DO NOT install in a tight fitting cabinet.
25. DO NOT overload the dryer.
26. The door window may be hot after a long drying cycle. Ensure children are kept away from the machine.
27. If the dryer is not wall mounted, place in a flat, firm, dry place. DO NOT place it on any soft material such as foam or plastic.
28. DO NOT use flammable or combustible materials such as gas, petrol, alcohol or lacquer in the dryer.
29. DO NOT use if the power supply cord is damaged.
30. Items with oil on them can ignite spontaneously, especially when exposed to heat sources such as this dryer. Piling, stacking, or storing oil-affected items can prevent heat from escaping and create a fire hazard.
31. If it is unavoidable that fabrics with vegetable oil, cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, wax removers or hair care products be placed in the dryer, they should first be washed in hot water with extra detergent. This will reduce, but not eliminate the fire hazard.
32. If the dryer is stopped before the end of the drying cycle, the items inside will be hot.

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

SPECIFICATIONS

Figure 2

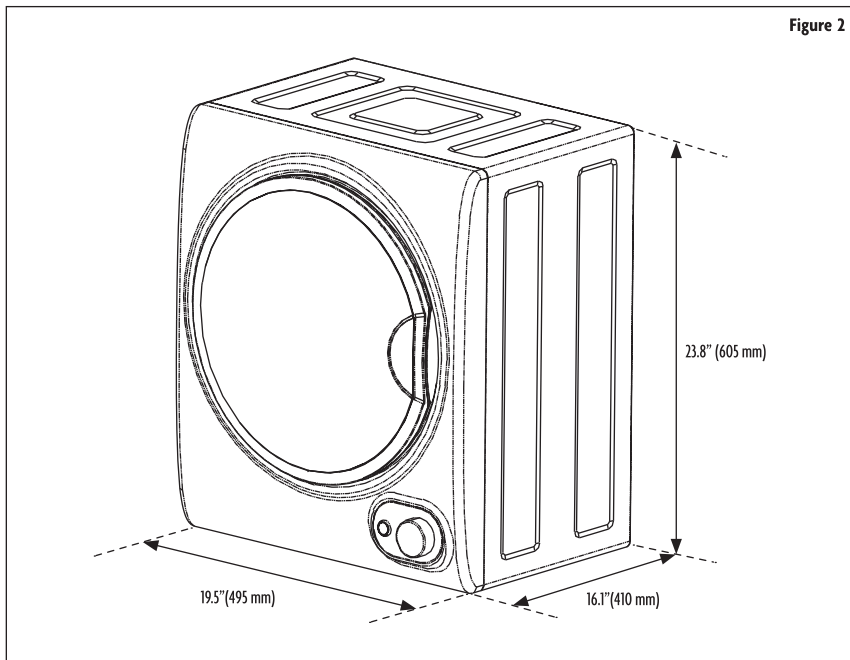

Height	23.8" (605 mm)
Width	19.5" (495mm)
Depth	16.1" (410 mm)
Weight	37.5 lbs. (17.0 kg)
Power Supply	120 V/60 Hz
Capacity	1.5 Cu. Ft.
Rated Power	850 W

* Due to continuing product development, specifications and design may be subject to change without prior notice.

PARTS AND FEATURES

FRONT

The appearance of your model may slightly differ from the illustrations in this manual.

- a. Door
- b. Window
- c. Door Gasket
- d. Drum
- e. Air Intake Shroud
- f. Timer
- g. Heat Level
- h. Lint Filter

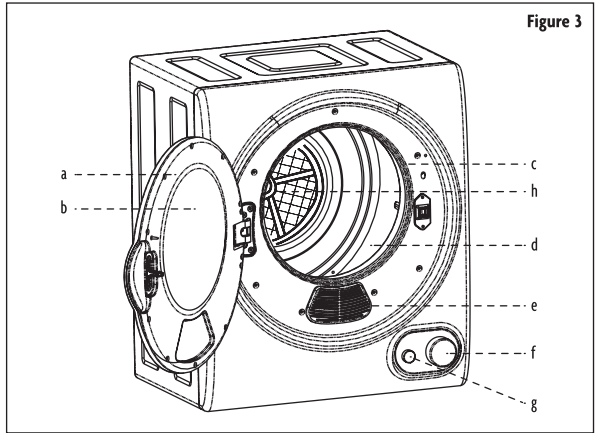


Figure 3

BACK

The appearance of your model may slightly differ from the illustrations in this manual.

- a. Dryer Housing
- b. Back Cover
- c. Exhaust Vent

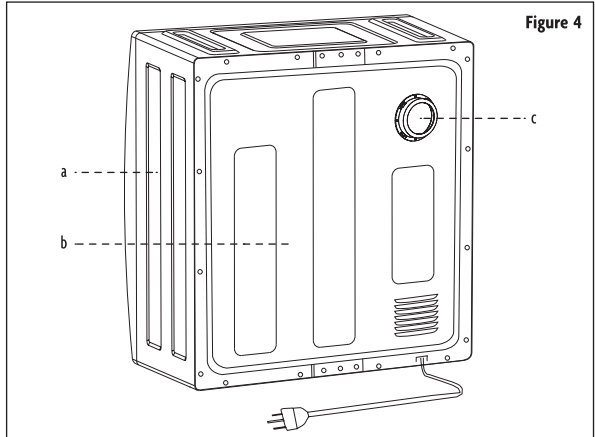


Figure 4

INSTALLATION INSTRUCTIONS





LOCATION

1. Examine the dryer after unpacking. Check for damage such as a misaligned door, broken door or dent in the cavity. If any damage is visible, DO NOT install, and notify your dealer immediately.
2. Check to ensure that you have the wall-mounting kit and four (4) legs.
3. Install the dryer on a flat, level surface. If you are going to wall mount your dryer, use the included wall-mounting kit.
4. Install the dryer away from direct sunlight; direct sunlight may affect the acrylic coating, plastic and electrical components. The room temperature should not fall below 32°F.
5. Check the ventilation. DO NOT block the air vents, especially when the dryer is installed on a carpeted floor. If the air vents are blocked during operation, the dryer may overheat and eventually fail. For proper ventilation, allow at least 5 inches of space between the dryer top, sides, rear, and adjacent surfaces.
6. Install the dryer away from heating appliances and water taps. Keep the dryer away from heat, steam, or splashing liquids. NEVER splash water onto the control panel. These things can adversely affect the wiring and electrical conduction contacts of the dryer.
7. Check the power supply.
 - a) Check your local power source. The dryer requires a current of approximately 12 Amperes, 120 Volts, and a 60 Hz grounded outlet.
 - b) A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Ensure that the dryer does not stand on its power cord.
 - c) Use of an extension cord is not recommended. If an extension cord is used:
 - The marked electrical rating of the cord set or extension cord should be at the very least equal to the electrical rating of the appliance.
 - The extension cord must be a grounding type, 3-wire cord.
 - A longer cord should be arranged so that it will not drape over the appliance where it can be pulled on by children or tripped over unintentionally.
 - d) Plug the dryer into a properly installed receptacle box that is fully grounded. DO NOT under any circumstances modify, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician or an authorized service center.

WALL-MOUNTING INSTRUCTIONS


Tools and Parts Required for Plaster and/or Wood Installation (Not Included)		Wall-Mounting Kit (Includes)	
Drill & 3mm Bit	1	Wall-Mounting Hooks	2
Phillips Head Screwdriver	1	1" Phillips Head Screws	4
Expanding Wall Anchor Bolts 2"	8	Plastic Spacers	2
Wooden Slats 18.5" (L) 3.0" (H) x 1.0" (D)	2	½" Phillips Flat Head Screws	4
Wood Screws (12 mm x 50 mm)	4	Exhaust Connector	1

Wall-Mounting Instructions	
*	<p>▲ NOTE: It is recommended to complete the following procedure with at least 2 people.</p> <p>▲ NOTE: As wall materials vary, the supplied hardware for fixing to the wall may be inappropriate for your wall type. Consult your local hardware/home improvement center for suggestions on the necessary hardware for your particular wall type.</p>
1	<p>Determine the position where you will be installing the mounting hooks.</p> <ul style="list-style-type: none"> This dryer is not designed to sit on top of your washing machine. A minimum of 2 inches is required between the top of the dryer and the ceiling above to allow easy installation and adequate spacing for exhaust. <p>If mounting above a top load washing machine, allow sufficient spacing to open the lid of the washer. In the case of a front loading washer, allow sufficient breathing space.</p>
2	<p>Although the supplied mounting hooks can be installed directly to the wall using the existing wooden studs, the preferred method of installation is using wooden slats that provide a flat, level installation surface and added stability to the whole wall installation.</p>
3	<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p>Use two wooden slats (not included) between the studs to mount the hooks. Recommended wooden slat size is 18.5" (L) x 3.0" (H) x 1.0" (D). When using the wooden slats to install on drywall material, you must use expanding wall anchor bolts to safely secure the slats to the drywall.</p> <p>Use four (4) expanding wall anchor bolts per each wooden slat.</p> </div> <div style="flex: 1;"> <p>Labels: Wall, Expanding Wall Anchor 2.0" (8), Wooden Slats 18.5" (L) x 3.0" (H) x 1.0" (D), 18.5", 16.7"</p> </div> </div>
4	<div style="display: flex; align-items: flex-start;"> <div style="flex: 1;"> <p>Install the wall-mounting hooks using the four (4) 1" Phillips Head Screws to the top wooden slat.</p> </div> <div style="flex: 1;"> <p>Labels: 17.8", 1" Phillips Head Screws, Mounting Hooks, Wooden Slat</p> </div> </div>
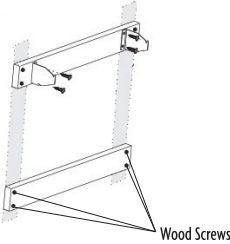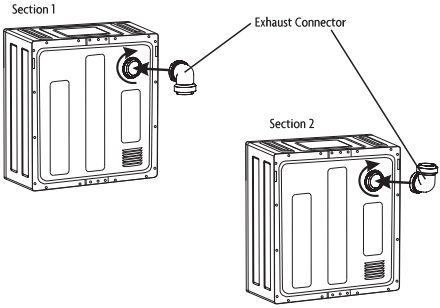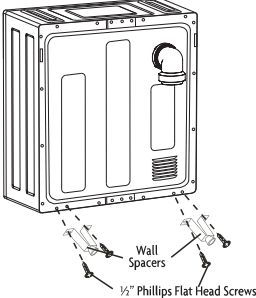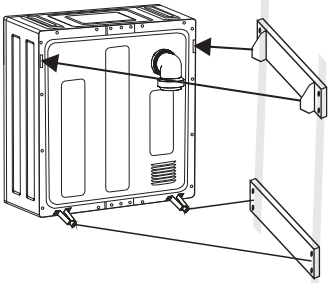
<p>5</p> <p>Install the four (4) wood screws to the bottom wooden slat.</p>	 <p>Wood Screws</p>
<p>6</p> <p>Install the exhaust pipe as shown in the illustration by lining it up with the connector on the back of the dryer and turning it clockwise so the tabs on the exhaust pipe fit into the slots on the connector.</p> <ul style="list-style-type: none"> • For a downward exhaust, join the sections (1) pointing downward. • For an upward exhaust, join the sections (2) pointing upward 	 <p>Section 1</p> <p>Section 2</p> <p>Exhaust Connector</p>
<p>7</p> <p>Install the lower wall spacers (included) using the (4) 1/2" Phillips flat head screws (included).</p> <p>These spacers are required when installing the unit on the wall to allow the necessary ventilation for efficient operation.</p> <p>Failure to install the spacers will both reduce the ventilation needed to operate your unit as well as put the appliance in a tilted position on the wall which could present a possible unstable wall installation.</p>	 <p>Wall Spacers</p> <p>1/2" Phillips Flat Head Screws</p>
<p>8</p> <p>Mount the dryer to the wall hanging assembly.</p> <p>With the assistance of a 2nd person, lift the dryer and align the mounting holes at the rear of the dryer with the mounting hooks.</p> <p>Tilting the dryer to a 45° angle, insert the hanging brackets into the mounting holes on the dryer as shown in the figure to the right.</p> <p>Once the dryer mounts are in place, slowly lower the dryer in place and check all installation points for stress or weakened contact.</p>	

OPERATION INSTRUCTIONS

CONTROL PANEL

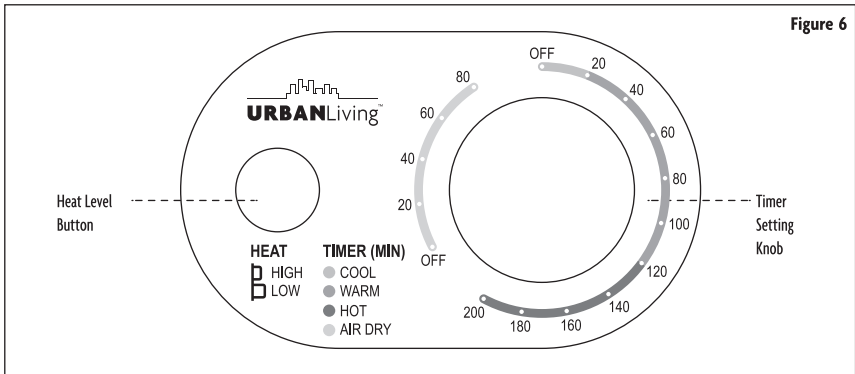

HEAT LEVEL

- **HIGH:** Push the 'HEAT' button down to operate the dryer on high heat. Use this setting for items that are bulky or for large quantities.
- **LOW:** Push the 'HEAT' button up to operate the dryer on low heat. Use this setting for delicate items such as silk, nylon, linen, etc.

TIMER SETTING

- **OFF:** When the timer is in the "OFF" position, power is not supplied to the unit. Turning the dial clockwise to the desired program will start the dryer.
- **COOL:** This setting is generally used to cool items that have just been dried to help prevent creasing. It will generate cool air, instead of the motor pushing heat into the drum of the dryer.
- **WARM:**
 - **ANTI-WRINKLE:** For laundry loads that are difficult to iron (e.g. cotton shirts and linen), push the 'HEAT' button up to operate the dryer on low heat and set the timer between 30-60 minutes, depending on the load size. Once the cycle stops, the items will still contain moisture, thereby making the ironing process easier.
 - **WARM DRYING:** This setting is used to dry and cool, and depending on the material, leave items wrinkle free. Push the 'HEAT' button down to operate the dryer on high heat and set the timer by turning the dial clockwise between 60-120 minutes.
- **HOT:** This setting is used for drying large quantities or bulky items (i.e. the dryer drum is more than 1/2 full). Set the timer by turning the dial clockwise to 120+ minutes.
- **AIR DRY:** This setting is used without any heat to freshen items by letting cool air move through it (e.g. clothes that have been stored for an extended period of time).

▲ NOTE: ALWAYS make sure items being dried have gone through the Spin cycle in the washing machine first.

DRYING TIME REFERENCE

For best results, it is recommended not to exceed the drying capacity of 5.5 lbs. of dry textile material. Drying times can be affected by many factors, such as material, bulkiness, how full the dryer is, etc. The table below is only a guide.

▲ NOTE: Load weights and respective drying times are approximate.

Drying Capacity	1 Lbs.	2 Lbs.	3 Lbs.	5.5 Lbs.
Approximate Drying Times	30 Minutes	60 Minutes	120 Minutes	200 Minutes

SORTING AND LOADING LAUNDRY

For the best results, your laundry should be sorted properly. Separate the lint shedders (e.g. chenille and terry cloth) from the lint collectors (e.g. synthetics, flannels, velvets, and corduroys). Separate non-colorfast from light colored items, heavy fabrics from lightweight fabrics, and permanent press from heavy, bulky items.

▲ NOTE: Delicate clothes, especially those with ribbon or lace, should be placed in a nylon mesh bag before drying to prevent tangling.

▲ NOTE: Before drying, check all pockets. If nails, coins, or pins remain in pockets, the objects may damage the dryer and/or clothes. Place your laundry into the dryer evenly. Uneven laundry may cause noise or vibrations.

▲ NOTE: Clothes with zippers, buckles, buttons, or fasteners should be closed or turned inside out to reduce the impact of noise between the metal and the dryer's drum.

▲ NOTE: DO NOT TUMBLE DRY. Read all permanent care labels carefully. If the care label on the garment reads "Drip Dry", "Line Dry", or "Dry Flat", DO NOT dry the garments in the dryer. In addition, certain materials will melt or become dangerously flammable if heated, while other garments may lose their shape. Other items that should not be tumble dried are the following:

- Garments that have been dry cleaned at home.
- Garments made from wool, unless the garment manufacturer recommends it.
- Garments with fiberglass materials.
- Garments with laminated and/or rubber coated materials.
- Garments with vinyl or plastic materials.

▲ NOTE: DO NOT use fabric softeners or related products that help eliminate static, unless recommended by the manufacturer of the fabric softener or related products.

























FABRIC CARE

- For optimum results, load the dryer with clothes of similar fabric, weight and construction.
- Check for stains that may not have been removed in washing. The dryer heat may permanently set some stains.
- Separate dark and light colored items, like you do when washing laundry.
- DRYING TIME: The drying time depends on many factors, such as the type of fabric. In addition, the drying duration is dependent on how dry you want the laundry to be when taken out of the dryer.
- DRYER ADDED FABRIC SOFTENERS: Certain dryer added fabric softeners may cause damage to automatic dryers. Therefore, only use fabric softeners with written assurance from the manufacturer that their softeners can safely be used in your dryer.
- SINGLE ITEMS: Use the timed drying mode when there is only one item to be dried.
- OVERDRYING GARMENTS: Do not overdry the garments. This can cause the fabrics to wrinkle, shrink, or feel harsh. Synthetic materials can also become charged with static electricity. Periodically check on the garments if you are unsure of the drying time.

▲ **NOTE:** Refer to the Fabric Care Chart on page 14 for commonly used fabric care symbols.

▲ **NOTE:** ALWAYS remove the laundry load from the dryer as soon as possible.

FABRIC CARE CHART

Fabric Care Symbol	Definition
	Resistant material
	Delicate fabric
	May be washed at 200°F/95°C
	May be washed at 140°F/60°C
	May be washed at 105°F/40°C
	May be washed at 85°F/30°C
	Item may be hand washed
	Dry clean only
	Can be bleached in cold water
	DO NOT bleach
	Can be ironed at 392°F/200°C max
	Can be ironed at 302°F/150°C max
	Can be ironed at 212°F/100°C max
	DO NOT iron
	Dry clean with any solvent
	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Dry clean with aviation fuel, pure alcohol or R113 only
	DO NOT dry clean
	Dry flat
	Can be hung to dry
	Dry on clothes hanger
	Tumble dry, normal heat
	Tumble dry, reduced heat
	DO NOT tumble dry

CARE AND MAINTENANCE

UNIT

The dryer should be cleaned regularly, including the control panel, with a soft cloth and nonabrasive household detergents. The use of harsh detergent or abrasives is not recommended.


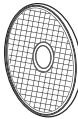
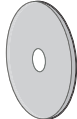
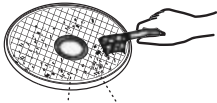
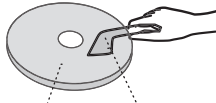

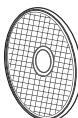
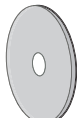
DO NOT pour water on the dryer or control panel. Use a soft cloth to dry the surfaces. Failure to maintain the dryer in a clean condition could lead to deterioration of the surface which could adversely affect the life of the appliance and possibly result in a hazardous situation.

▲ NOTE: Unplug the power cord before cleaning any part of the dryer.

LINT FILTER ASSEMBLY

The dryer should be cleaned regularly, including the lint filter assembly. Refer to the Lint Filter Assembly chart when cleaning the filter assembly.





▲ NOTE: Unplug the power cord before cleaning any part of the dryer

Lint Filter Assembly	
1	<p>Remove the lint filter by using the four (4) grip holes in the filter assembly to rotate the filter (in either direction) until you feel a bump, then pull it outward</p> <p>▲ NOTE: The lint filter assembly must be installed when operating the dryer. The lint filter assembly must be cleaned before and after each use.</p>
2	<p>The lint filter assembly consists of three (3) parts: exhaust vent shroud, lint filter, and exhaust filter.</p> <p>Disassemble the lint filter in the following order: exhaust vent shroud - lint filter - exhaust filter.</p> <div style="display: flex; justify-content: space-around; align-items: center; text-align: center;">    </div> <p style="display: flex; justify-content: space-around; align-items: center; text-align: center;"> Exhaust Vent Shroud Lint Filter Exhaust Filter </p>
3	<p>Separate the three (3) parts of the assembly and clean the individual pieces using a soft brush or a vacuum cleaner. DO NOT damage the filter assembly.</p> <div style="display: flex; justify-content: space-around; align-items: center; text-align: center;">   </div> <p style="display: flex; justify-content: space-around; align-items: center; text-align: center;"> Lint Filter Lint Exhaust Filter Dust Cleaner </p>
4	<p>Reassemble the filter assembly in the following order: exhaust filter - lint filter - exhaust vent shroud. Align the entire assembly with the recessed position in the back of the drum and press firmly until the entire filter assembly is secured.</p> <div style="display: flex; justify-content: space-around; align-items: center; text-align: center;">    </div> <p style="display: flex; justify-content: space-around; align-items: center; text-align: center;"> Exhaust Vent Shroud Lint Filter Exhaust Filter </p>

AIR INTAKE FILTER

The dryer should be cleaned regularly, including the air intake filter. Refer to the Air Intake Filter chart when cleaning the filter.

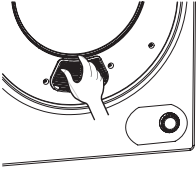▲ NOTE: Unplug the power cord before cleaning any part of the dryer.

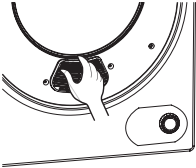Air Intake Filter Assembly		
1	<p>Remove by pulling outwards, holding the upper and lower ends of the air intake shroud.</p> <p>▲ NOTE: The air intake filter assembly must be installed when operating the dryer. The air intake filter assembly must be cleaned before and after each use.</p>	
2	<p>The air intake filter consists of two (2) parts: air intake shroud and air intake filter.</p>	 <p>Air Intake Shroud Air Intake Filter</p>
3	<p>Remove the air intake shroud and take the air intake filter out. Clean the filter using a soft brush or a vacuum cleaner.</p>	 <p>Air Intake Filter</p>
4	<p>Reassemble the air intake filter inside the air intake shroud, then reinstall the air intake shroud by pushing the housing upwards with your thumb until the latch is secured to the dryer.</p>	

TROUBLESHOOTING

Before you call for service, refer to following checklist for common problems:

Problem	Possible Causes
The 'TIMER' dial will not rotate	The dryer is not plugged in. The circuit breaker tripped or a fuse blew. Check for a blown circuit fuse or tripped main circuit breaker in your house. The door is not closed.
The dryer does not operate	The dryer is not plugged in. The circuit breaker tripped or a fuse blew. Check for a blown circuit fuse or tripped main circuit breaker in your house. The door is not closed.
The dryer drum does not rotate	The dryer is not plugged in. The circuit breaker tripped or a fuse blew. Check for a blown circuit fuse or tripped main circuit breaker in your house. The door is not closed.
The laundry is not completely dry	Verify the correct drying settings were used for 'TIMER' and 'HEAT'. Clean the filter. Reduce the laundry load in the dryer. DO NOT overload the dryer. Dry these items further in the timed drying mode for 10+ minutes. Ensure the items are not knotted or bulked together. The dryer is not located in a properly ventilated area. Ensure your washer's spin cycle is extracting water properly.

▲ NOTE: If the problem persists, contact Customer service at (877) 856-0202 for assistance.

URBANLivingTM

LIMITED WARRANTY

MC Appliance Corporation warrants each new Compact Dryer to be free from defects in material and workmanship, and agrees to remedy any such defect or to furnish a new part(s), at the company's option, for any part(s) of the unit that has failed during the warranty period. Parts and labor expenses are covered on this unit for a period of one year from the date of purchase. A copy of the dated sales receipt/invoice is required to receive warranty service, replacement or refund.

This warranty covers appliances in use within the contiguous United States, Alaska, Hawaii and Puerto Rico. This warranty does not cover the following:

- Damages due to shipping damage or improper installation.
- Damages due to misuse or abuse.
- Content losses due to failure of the unit.
- Repairs performed by unauthorized service agents.
- Service calls that do not involve defects in material and workmanship such as instructions on proper use of the product or improper installation.
- Replacement or resetting of house fuses or circuit breakers.
- Failure of this product if used for other purposes than its intended purpose.
- Disposal costs for any failed unit not returned to our factory.
- Any delivery/installation costs incurred as the result of a unit that fails to perform as specified.
- Expenses for travel and transportation for product service if your appliance is located in a remote area where service by an authorized service technician is not available.
- The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.
- Refunds for non repairable products are limited to the price paid for the unit per the sales receipt.
- This warranty is non transferable. This warranty applies only to the original purchaser and does not extend to any subsequent owner(s).

Limitations of Remedies and Exclusions:

Product repair in accordance with the terms herein, is your sole and exclusive remedy under this limited warranty. Any and all implied warranties including merchantability and fitness for a particular purpose are hereby limited to one year or the shortest period allowed by law. MC Appliance Corporation is not liable for incidental or consequential damages and no representative or person is authorized to assume for us any other liability in connection with the sale of this product. Under no circumstances is the consumer permitted to return this unit to the factory without the prior written consent of MC Appliance Corporation.

Some states prohibit the exclusion or limitation of incidental or consequential damages, or limitations on implied warranties. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Model	Parts	Labor	Type of Service
UBLDRY15W	One Year	One Year	Carry In

For Service or Assistance please call (877) 856-0202 or visit us on the web at urbanlivingappliance.com to request warranty service or order parts.



Urban Living TM is a trademark of CNA International, Inc. d/b/a MC Appliance Corporation

urbanlivingappliance.com

Printed in China